

# Telis Hand-Held Remote

## Features


UP Button

The "my" button acts as a stop button when the window covering is in motion. When the window covering is stationary, the "my" button brings it to the programmed favorite position.


DOWN Button

Channel LED  
All 4 lights will illuminate when fifth channel is activated.

Channel Selector Button

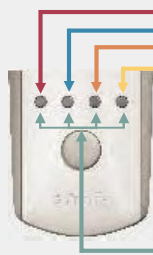

- Channel 1 selected
- Channel 2 selected
- Channel 3 selected
- Channel 4 selected
- Channel 5 selected

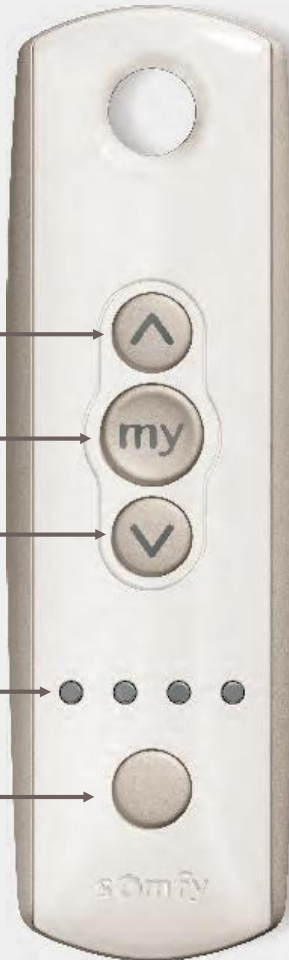

Telis 4 RTS  
Hand-Held Remote  
*shown in Pure finish*  
Telis 1 RTS also available

Programming  
Button  
(recessed)



Back view of Remote

Also available in multiple finishes:



Silver



Lounge



Patio